

# Brakes

---


## Brakelight Switch Adjustment

Refer to *Safety Precautions* on page 99 .

### Rear Brake Only:

Check the operation of the rear brakelight switch ( 1 ) at the right side behind the engine from time to time. The brakelight should turn on at 0.6 in (15 mm) of pedal stroke. See *Rear Brake Pedal Freeplay*, page 149 . Adjustment is done by turning the adjusting nut ( 2 ). Turn the nut in direction ( A ) if the switch operates too late and in direction ( B ) if the switch operates too soon.

### RIGHT SIDE

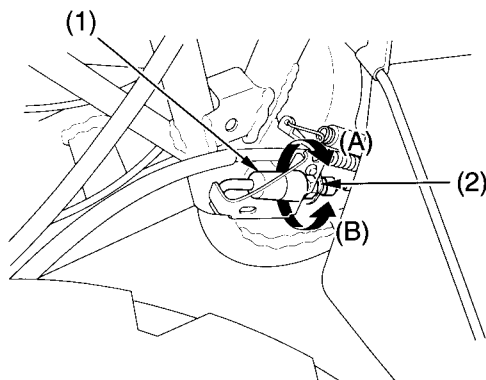

- (1) rear brakelight switch
- (2) adjusting nut