

Troubleshooting

Engine Will Not Start	P. 79
Warning Indicator On or Flashing	P. 80
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)	P. 80
Tyre Puncture	P. 81
Tube Repair and Replacement	P. 81
Electrical Trouble	P. 86
Battery Goes Dead.....	P. 86
Burned-out Light Bulb	P. 86
Blown Fuse.....	P. 91