


Installation

1. Install the side collar into the right side wheel hub.
2. Position the wheel between the fork legs and insert the front axle shaft from the right side, through the right fork leg and wheel hub.
3. Make sure that the lug on the left fork leg is located in the slot of the speedometer gearbox. When installing the wheel, carefully fit the brake disc between the brake pads to avoid damaging the pads.
4. Tighten the axle nut.

Torque: 59 N·m (6.0 kgf·m, 44 lbf·ft)

5. Install the speedometer cable securely.
6. Install the front axle nut cap.

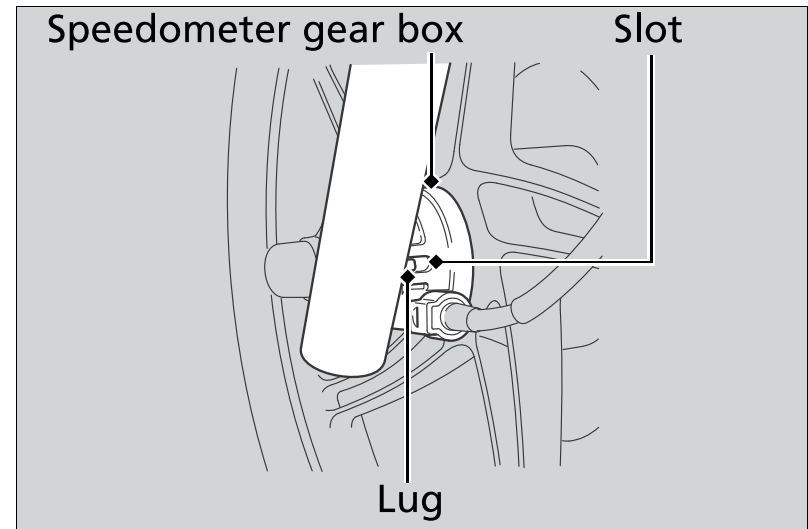

After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.