

Fuel Tank

Fuel tank capacity is 10.5ℓ (2.77 US gal, 2.31 Imp. gal) including 1.8ℓ (0.48 US gal, 0.40 Imp. gal) in the reserve supply.


To open the fuel tank cap (1), pull out the breather tube (2) from the steering stem nut. Then turn the fuel tank cap counterclockwise.

After refueling, be sure to tighten the fuel cap firmly by turning clockwise until the arrow on the cap face forward.

Insert the breather tube into the steering nut.

WARNING

- * *Gasoline is extremely flammable and is explosive under certain conditions. Refuel in a well ventilated area with the engine stopped. Do not smoke or allow open flames or sparks in the area where the vehicle is refueled or where gasoline is stored.*
- * *Avoid repeated or prolonged contact with skin or breathing of vapor. KEEP OUT OF REACH OF CHILDREN.*
- * *Do not overfill the tank (there should be no fuel in the filler neck). After refueling, make sure the tank cap is closed securely.*

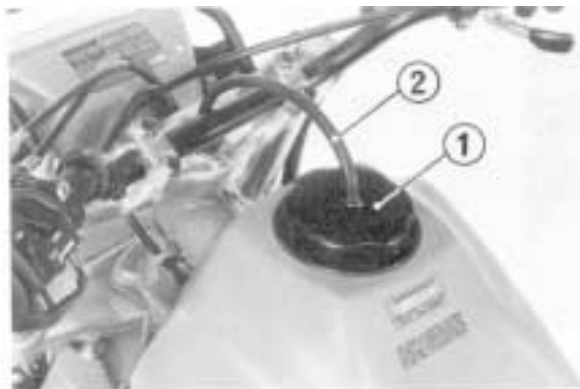

- (1) Fuel tank cap
- (2) Breather tube