


4. Raise the starter valve knob (1) to (A).
5. With the throttle (2) closed, operate the kick starter (3) with a rapid, continuous motion.
6. After the engine starts, run it for a few minutes, "blipping" the throttle until it warms up enough to idle with the starter valve knob lowered (B). The knob should be lowered as soon as possible to prevent spark plug fouling.

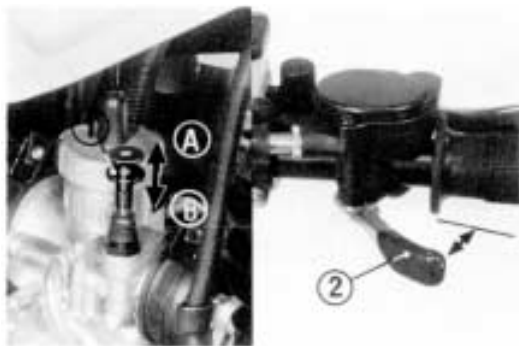

(1) Starter valve knob
(A) Close (B) Open

(2) Throttle lever

Warm engine starting

1. Follow the cold engine starting procedure without operating the starter valve knob and with the throttle opened slightly (1/8-1/4).

CAUTION:

- * *Do not race the engine during the warm-up period. Racing a cold engine wastes fuel and increases engine wear.*

NOTE:

- * You can restart the engine with the transmission in gear by holding in the clutch lever while operating the kickstarter.



(3) Kick starter