

4. Tighten and torque the carburetor drain bolt.
Torque: 8–12 N·m (0.8–1.2 kg-m, 6–9 ft-lb)
5. Turn the fuel valve on.
Start the engine. Adjust the idle speed with the throttle stop screw; adjust the air screw (page 37).

NOTE:

- * Adjust the idle speed and air screw at high altitude to ensure proper high altitude operation.

Removal:

1. Follow installation steps 1-3.
2. Reinstall the original No. 130 main jet.
Tighten and torque the carburetor drain bolt.
Torque: 8–12 N·m (0.8–1.2 kg-m, 6–9 ft-lb)
3. Reinstall the carburetor. Adjust the idle speed with the throttle stop screw; adjust the air screw (page 37).

NOTE:

- * Adjust the idle speed and air screw at low altitude to ensure proper low altitude operation.