


AIR CLEANER

The air cleaner element accumulates dust and must be cleaned periodically. If the ATC250R is ridden in unusually dusty areas, the element must be cleaned at more frequent intervals than specified in the MAINTENANCE SCHEDULE.

1. Remove the seat by sliding the lever (1).
2. Remove the clips (1) and remove the air cleaner cover (2).
3. Remove the air cleaner by removing a screw (3).
4. Remove the filter element (4), wash it in non-flammable or high flash point solvent. Allow it to dry thoroughly.

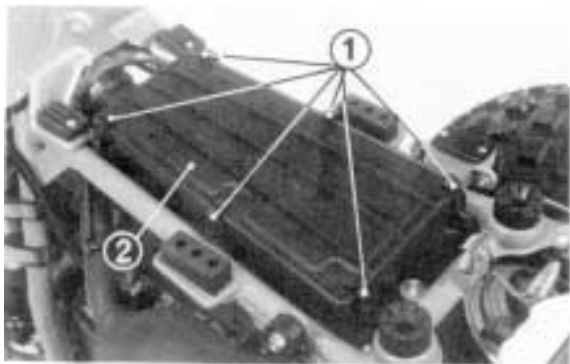


- (1) Clips
- (2) Air cleaner cover

5. Soak the filter element in clean gear oil (SAE 80–SAE 90) until saturated, then squeeze out the excess oil.
6. Reassemble by reversing the disassembly sequence.

WARNING

- * *Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.*

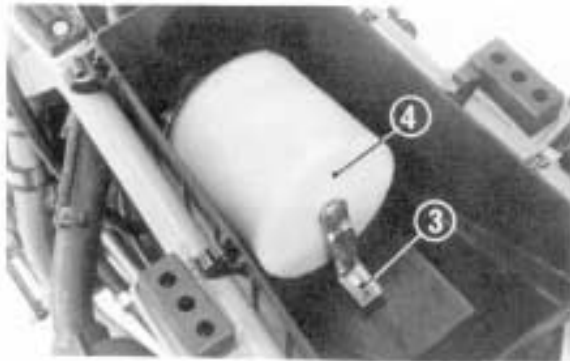

- (3) Screw
- (4) Filter element