



4. The preset figure is displayed and the third digit will be flashing.

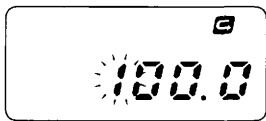

5. To set the third digit, press the right control button (3) until the desired third digit appears.
- Quick setting – press and hold the right control button until the desired third digit appears.

6. Press the left control button when the display reaches the desired figure. The second digit will be flashing.

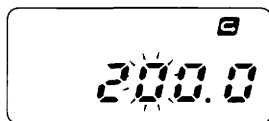

7. Repeat steps 5 and 6 for the second and first digits.

If the ignition switch is turned off or no operation is performed for 5 seconds during the adjustment mode, the set digits will reset.