


TODAY

Shows the present date for 5 seconds and then shows today's mileage.

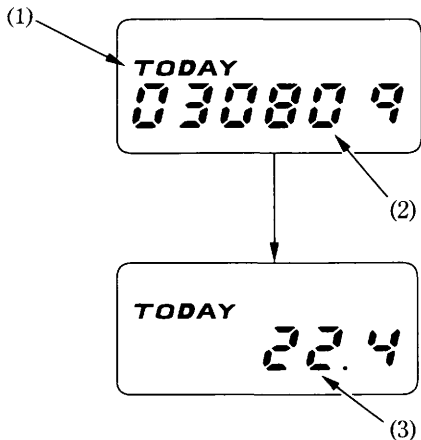


- (1) TODAY display
- (2) Present date
- (3) Today's mileage

How to set date:

1. Turn the ignition switch ON.
2. Select the TODAY mode.
3. During the present date display displayed (for 5 seconds), press and hold the right control button (4) for more than 2 seconds.

The year display will be flashing.

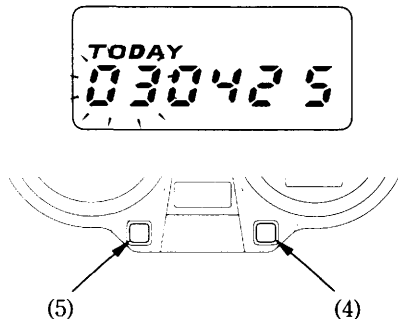

- (4) Right control button
- (5) Left control button