

(Ref. Nr.) Description	Function
<p>- Coolant temperature indicator (red)</p>	<p>It lights when the coolant is over the specified temperature. If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 26-27 and do not ride the motorcycle until the problem has been corrected.</p> <p>NOTICE</p> <p>Exceeding maximum running temperature may cause serious engine damage.</p>
<p>(3) Tachometer</p>	<p>Shows engine revolutions per minute.</p>
<p>(4) Tachometer red zone</p>	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p>NOTICE</p> <p>Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.</p>
<p>(5) Fuel gauge</p>	<p>Shows approximate fuel supply available (page 17).</p>