



1. To drain the oil, remove the oil filler cap and crankcase oil drain plug (1) and sealing washer (2).

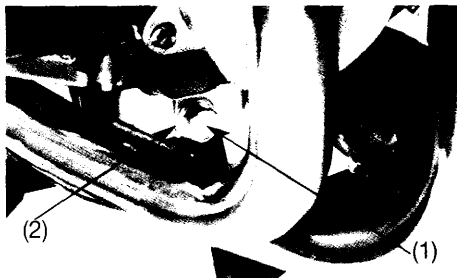

- (1) Oil drain plug
- (2) Sealing washer

2. Remove the oil filter cover (3) by undoing the two retaining bolts (4). Remove the oil filter (5) using a filter tool and dispose of any oil residue. Dispose of the old filter correctly.

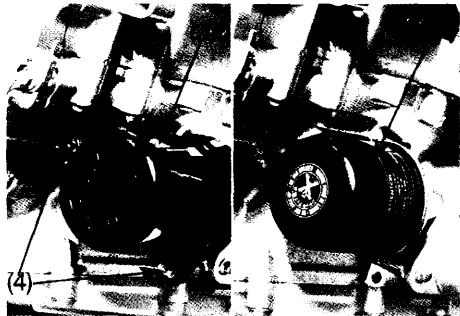

- (3) Oil filter cover
- (4) Bolts
- (5) Oil filter