


### FI fuse (CBF1000A)

The FI fuse (1) is located behind the right side cover on the battery housing.

The fuse specified is : 20A

1. Remove the right side cover (page 53).
2. Open the cover of the FI fuse box (2).
3. Remove the FI fuse and replace it with a new one. The spare FI fuse is kept in the fuse box under the rear seat (page 112).
4. Close the fuse box cover and reinstall the side cover.

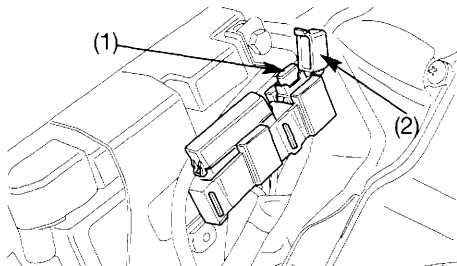

(1) FI Fuse (CBF1000A)

(2) FI fuse box cover


**114**

### FI fuse (CBF1000)

The FI fuse (3) is located in the fuse box(4) under the rear seat (pag.112).

The fuse specified is : 20A

1. Remove the rear seat (page 50).
2. Open the fuse box cover (2).
3. Pull out the old FI fuse(3) and install a new fuse. The spare FI fuse is located in the fuse box.
4. Close the fuse box covers and reinstall the rear seat.

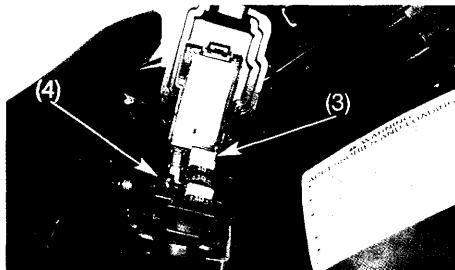

(3) FI Fuse (CBF1000)

(4) Box fuse