


Rear Turn Signals Bulb

1. Remove the taillight lens (page 121).
2. Remove screw (1).
3. Remove the turn signal lens (2).
4. Remove bulb (3) by pressing it and turning it counterclockwise.
5. Fit a new bulb and check that the turn signal is working properly.
 - Use only the amber bulb.

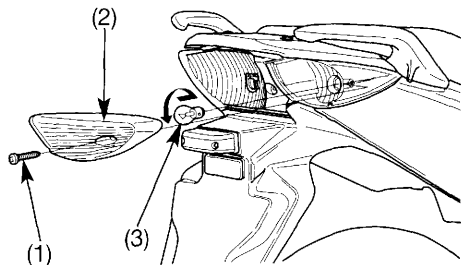

- (1) Screw
- (2) Turn signal lens
- (3) Bulb