


Spring preload adjustment:

The spring preload adjuster (2) has 22 positions to turn it with a 10 mm box wrench and handle grip provided in the tool box.

The adjuster is located behind the right side cover.

To reduce preload—turn the adjuster in counterclockwise.

To increase preload—turn the adjuster in clockwise.

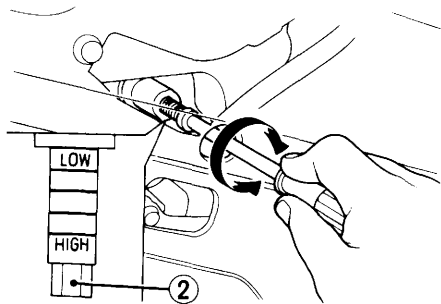

(2) Spring preload adjuster