

MAINTENANCE

Page

| | |
|----|---------------------------|
| 48 | MAINTENANCE |
| 49 | Maintenance Schedule |
| 51 | Tool Kit |
| 52 | Serial Numbers |
| 53 | Color Label |
| 54 | Maintenance Precautions |
| 55 | Fairing |
| 56 | Air Cleaner |
| 57 | Crankcase Breather |
| 58 | Engine Oil |
| 61 | Spark Plugs |
| 64 | Throttle Operation |
| 65 | Idle Speed |
| 66 | Drive Chain |
| 71 | Front and Rear Suspension |
| 72 | Side Stand |
| 73 | Wheel Removal |

page

| | |
|----|------------------------|
| 80 | Brake Pad Wear |
| 81 | Battery |
| 84 | Fuse Replacement |
| 86 | Stop Switch Adjustment |
| 87 | CLEANING |
| 89 | STORAGE GUIDE |
| 89 | Storage |
| 90 | Removal from Storage |
| 91 | SPECIFICATIONS |