

The indicators and warning lights are contained in the instrument panel. Their functions are described in the tables on the following pages.

- (1) Speedometer
- (2) Tripmeter
- (3) Odometer
- (4) Left turn signal indicator
- (5) Oil pressure warning light
- (6) Neutral indicator
- (7) High beam indicator
- (8) Right turn signal indicator
- (9) Tachometer
- (10) Tachometer red zone
- (11) Fuel gauge
- (12) Coolant temperature gauge
- (13) Side stand indicator
- (14) Tripmeter reset knob

