

(Ref. No.) Description	Function
(1) Speedometer	Shows riding speed.
(2) Tripmeter	Shows mileage per trip.
(3) Odometer	Shows accumulated mileage.
(4) Left turn signal indicator	Flashes when the left turn signal operates.
(5) Oil pressure warning light (red)	<p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>CAUTION: * Running the engine with insufficient oil pressure may cause serious engine damage.</p>
(6) Neutral indicator (green)	Lights when the transmission is in neutral.
(7) High beam indicator (blue)	Light when the headlight is on high beam.