

( Ref. No. ) Description	Function
(8) Right turn signal indicator	Flashes when the right turn signal operates.
(9) Tachometer	Shows engine rpm.
(10) Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p><b>CAUTION:</b></p> <p><b>* Running the engine beyond recommended maximum engine speed (tachometer red zone) can damage the engine.</b></p>
(11) Fuel gauge	Shows approximate fuel supply available (see page 14 ).
(12) Coolant temperature gauge	Shows coolant temperature (see page 13 ).
(13) Side stand indicator (amber)	Lights when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 72 ) is activated.
(14) Tripmeter reset knob	Resets tripmeter to zero (0) by pushing the knob.