


AIR CLEANER

(Refer to the maintenance precautions on page 54).


The air cleaner should be serviced at regular intervals (page 49). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the right side cover.
2. Remove the air duct by removing screws (1).

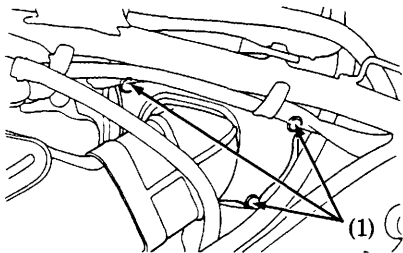

(1) Screws

3. Pull out the retainer (2) and air cleaner element (3).
4. Discard the air cleaner element and install a new element.
Use the Honda air filter or an equivalent filter specified for your model. Other filters not specified for your model may not filter impurities properly.
5. Install the removed parts in the reverse order of disassembly.

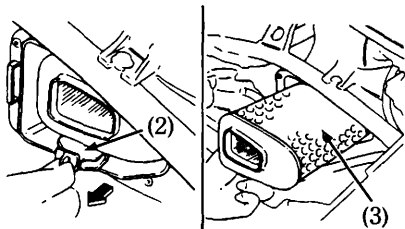

(2) Retainer

(3) Air cleaner element