


3. Apply a thin coat of engine oil to the new oil filter rubber seal (4).
4. Install the new oil filter and tighten it to:

10 N·m (1.0 kg-m , 7 lb-ft)

Use the Honda oil filter or an equivalent filter specified for your model. Other filters not specified for your model may not filter impurities properly.

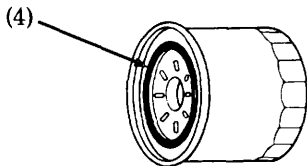

(4) Oil filter rubber seal

5. Check that the sealing washer on the drain plug is in good condition and install the plug. Replace the sealing washer every other time the oil is changed, or each time if necessary.

Oil Drain Plug Torque:

35 N·m (3.5 kg-m , 25 lb-ft)

6. Fill the crankcase with the recommended grade oil; approximately:
3.8 ℓ (4.0 US qt , 3.3 Imp qt)
7. Install the oil filler cap.
8. Start the engine and let it idle for 2–3 minutes.
9. Stop the engine and check that the oil level is at the upper level mark on the dipstick with the motorcycle upright on firm, level ground. Make sure there are no oil leaks.

NOTE:

- * When running in very dusty conditions, oil changes should be performed more frequently than specified in the maintenance schedule.