

FUSE REPLACEMENT

(Refer to the maintenance precautions on page 54).


The main fuse (1), located near the rear brake reservoir behind the right side cover is :

30A (Main fuse)

The spare main fuse (3) is located on battery strap.

The fuse box (4) is located under the left inner cover. The specified fuses are :

10A and 20A

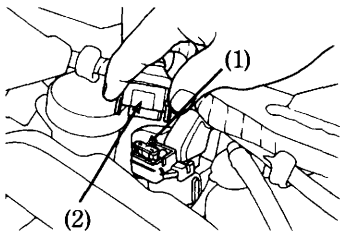

(1) Main fuse


(2) Wire connector

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

CAUTION:

*** Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace the main fuse (1), remove the right side cover, disconnect the wire connector (2) of the stator magnetic switch and pull out the old fuse. Install a new fuse and reconnect the connector.

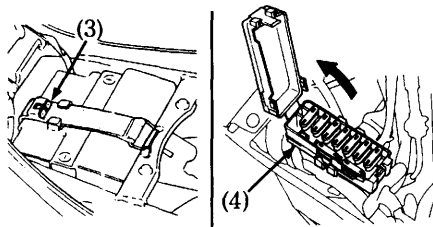

(3) Spare main fuse

(4) Fuse box