

| <b>( Ref. No. ) Description</b> | <b>Function</b>  |
|---------------------------------|--|
| (7) Neutral indicator (green)   | Lights when the transmission is in neutral.  |
| (8) High beam indicator (blue)  | Light when the headlight is on high beam.  |
| (9) Right turn signal indicator | Flashes when the right turn signal operates.   |
| (10) Tachometer                 | Shows engine rpm.  |
| (11) Tachometer red zone        | Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.<br><b>CAUTION:</b><br><b>*Running the engine beyond recommended maximum engine speed (tachometer red zone) can damage the engine.</b> |
| (12) Fuel gauge                 | Shows approximate fuel supply available (see page 13).   |
| (13) Coolant temperature gauge  | Shows coolant temperature (see page 12).   |
| (14) Tripmeter reset knob       | Resets tripmeter to zero (0) by pushing the knob.  |