


## LOWER FAIRING

### Right Lower Fairing Removal:

The right lower fairing must be removed for replacing the oil filter.


1. Remove the right side cover (page 40).
2. Remove the lid (1) by removing the two A clips (2).

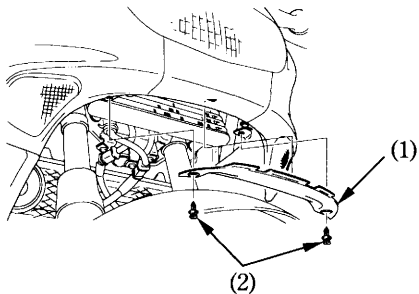

(1) Lid

(2) Clip A

3. Remove the B clip (3).
4. Remove the three trim clips (4).

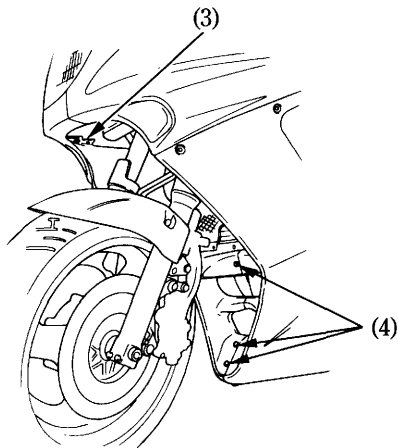

(3) Clip B

(4) Trim clip