

UNDER COWL


The right and left under cowls can be removed in the same manner.

Removal:

1. Remove the inner lower cowl (page 73).
2. Remove the clips (1).
3. Remove the bolts A (2) and bolts B (3).

Installation:

- Installation can be done in the reverse order of removal.

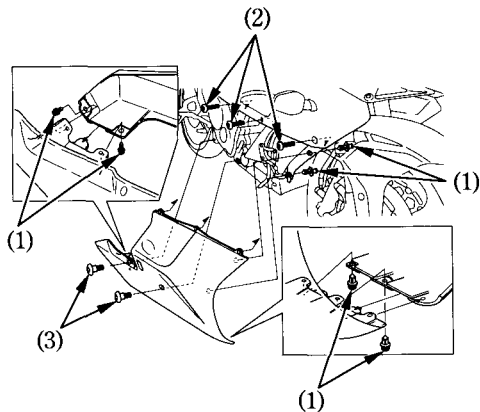

- (1) Clips
- (2) Bolts A
- (3) Bolts B