

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								REFER TO PAGE	
			× 1,000 km	1	6	12	18	24	30	36		
			× 1,000 mi	0.6	4	8	12	16	20	24		
			NOTE	MONTH								
	DRIVE CHAIN				EVERY 1,000 km (600 mi) I, L						104	
	DRIVE CHAIN SLIDER					I		I		I		110
	BRAKE FLUID	NOTE (3)				I	I	R	I	I	R	40
	BRAKE PAD WEAR					I	I	I	I	I	I	120
	BRAKE SYSTEM				I		I		I		I	40
*	BRAKE LIGHT SWITCH						I		I		I	—
*	HEADLIGHT AIM						I		I		I	—
	CLUTCH SYSTEM				I	I	I	I	I	I	I	43
**	EXHAUST VALVE CONTROL CABLE				EVERY 24,000 km (16,000 mi) I						—	
	SIDE STAND						I		I		I	112
*	SUSPENSION						I		I		I	111
*	NUTS, BOLTS, FASTENERS				I		I		I		I	—
**	WHEELS/TYRES						I		I		I	—
**	STEERING HEAD BEARINGS				I		I		I		I	—