


## Position Light Bulb

1. Remove the screws (1) and the position light lens (2).
2. Pull out the bulb (3) without turning.
3. Install a new bulb in the reverse order of removal.

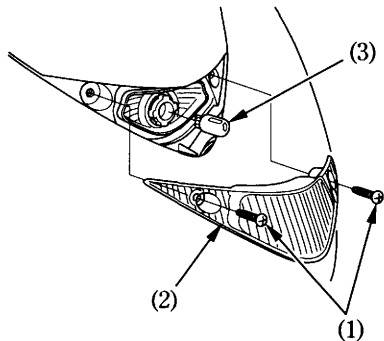

- (1) Screws
- (2) Position light lens
- (3) Bulb