


License Light Bulb

1. Remove the wire harness (1) from the clamp (2).
2. Turn the socket (3) counterclockwise, and remove it.
3. Pull out the bulb (4) without turning.
4. Install a new bulb in the reverse order of removal.

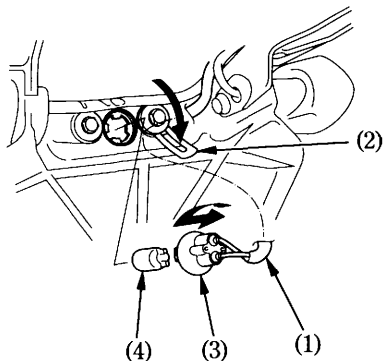

- (1) Wire harness
- (2) Clamp
- (3) Socket
- (4) Bulb