

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								REFER TO PAGE
			× 1,000 km	1	6	12	18	24	30	36	
			× 1,000 mi	0.6	4	8	12	16	20	24	
NOTE	MONTH		6	12	18	24	30	36			
DRIVE CHAIN			EVERY 1,000 km (600 mi) I, L								109
DRIVE CHAIN SLIDER					I		I		I	115	
BRAKE FLUID		NOTE (3)		I	I	R	I	I	R	40	
BRAKE PADS WEAR				I	I	I	I	I	I	125	
BRAKE SYSTEM			I		I		I		I	40	
* BRAKE LIGHT SWITCH					I		I		I	—	
* HEADLIGHT AIM					I		I		I	—	
CLUTCH SYSTEM					I		I		I	43	
CLUTCH FLUID		NOTE (3)		I	I	R	I	I	R	43	
** EXHAUST GAS CONTROL VALVE CABLE			EVERY 24,000 km (16,000 mi) I								—
SIDE STAND					I		I		I	117	
* SUSPENSION					I		I		I	116	
* NUTS, BOLTS, FASTENERS			I		I		I		I	—	
** WHEELS/TYRES					I		I		I	—	
** STEERING HEAD BEARINGS			I		I		I		I	—	