

WHEEL REMOVAL

Refer to the Safety Precautions on page 100.

This motorcycle is equipped with a side stand only. Therefore, if front or rear wheel removal is required, it will be necessary to raise the center of the motorcycle with a jack or other firm support. If none is available, see your Honda dealer for this service.


When removing and installing the wheel, be careful not to damage the sensor and pulser ring (Model equipped with Combined ABS).

Front Wheel Removal

1. Support the motorcycle securely and raise the front wheel off the ground using a safety stand or a hoist.

2. < CBR1000RR ABS >

Remove the speed sensor guide (1) and speed sensor (2) from the right fork leg by removing the bolts (3).

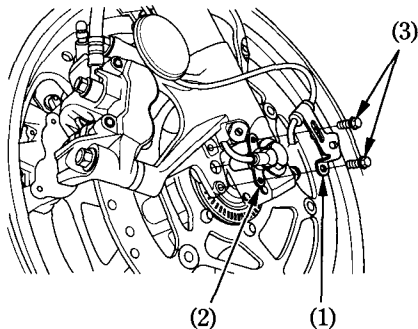

(1) Speed sensor guide

(3) Bolts

(2) Speed sensor