Rear Brake Fluid Level:


Check the brake fluid level from the inspection window (1) of the rear cowl with the motorcycle in an upright position. It should be between the UPPER (2) and LOWER (3) level marks. If the level is at or below the LOWER level mark (3), check the brake pads for wear (page 114).

Worn pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.

The recommended brake fluid is Honda DOT 4 brake fluid from a sealed container, or an equivalent.

Other Checks:

Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.

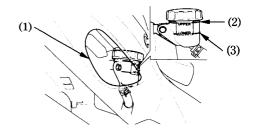

- (1) Inspection window
- (2) UPPER level mark
- (3) LOWER level mark