



3. Remove the radiator mount bolt (1) and collar (2).

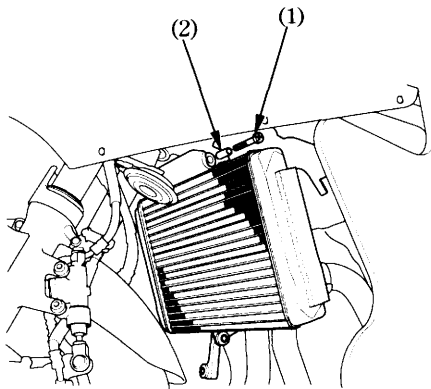

(1) Radiator mount bolt (2) Collar

4. Remove the plate A (3).
5. Remove the plate B (4) by removing the screw (5).
6. Remove the heat guard (6) from the radiator hose (7).

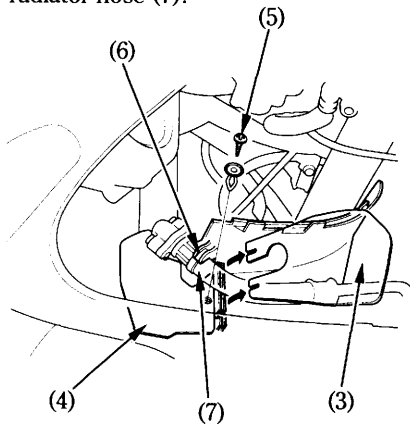

(3) Plate A
(4) Plate B
(5) Screw

(6) Heat guard
(7) Radiator hose