


## HEADLIGHT AIM VERTICAL ADJUSTMENT

Vertical adjustment can be made by turning the pinion (1) in or out as necessary. Obey local laws and regulations.

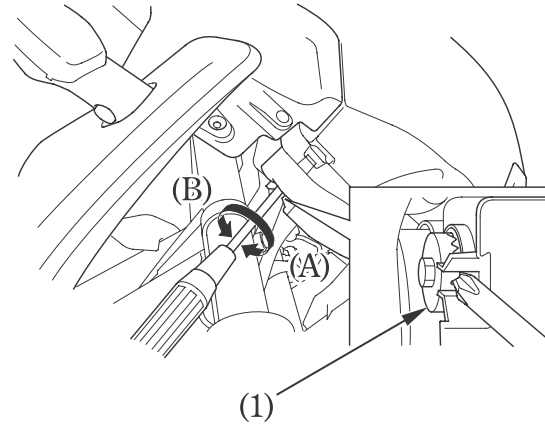

(1) Pinion

(A) Up

(B) Down