

AIR CLEANER


Refer to the Safety Precautions on page 69 .

The air cleaner should be serviced at regular intervals (page 71). Service more frequently when riding in unusually wet or dusty areas.


1. Remove the air cleaner case cover (1) by removing the screws (2).
2. Remove the air cleaner element (3) by pushing the tabs (4).
3. Install the new air cleaner element. Make sure the air cleaner element is fixed.

Use the Honda Genuine air cleaner element or an equivalent air cleaner element specified for your model. Using the wrong Honda air cleaner element or a non-Honda air cleaner element which is not of equivalent quality may cause premature engine wear or performance problems.

4. Install the removed parts in reverse order of removal.

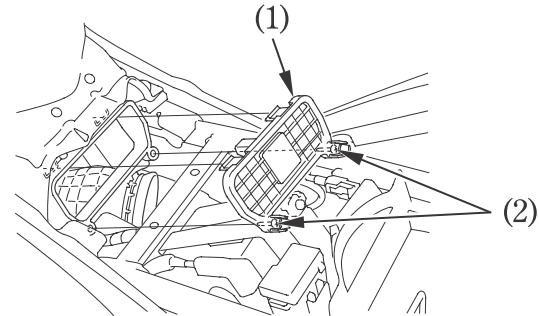

(1) Air cleaner case cover (2) Screws

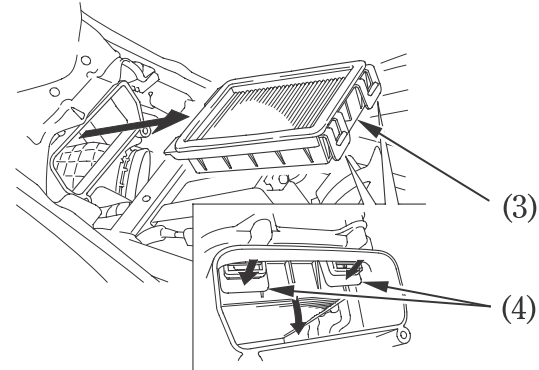

(3) Air cleaner element (4) Tabs