

## Tyre Puncture ▶ Removing Wheels

5. Remove the rear axle shaft, washer, brake caliper bracket, rear wheel and side collars.
  - ▶ Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
  - ▶ Avoid getting grease, oil, or dirt on the disc or pad surfaces.
  - ▶ Do not push the brake pedal while the brake caliper is removed.

## Installation

1. To install the rear wheel, reverse the removal procedure.
  - ▶ Take care to prevent the brake caliper from scratching the wheel during installation.

### NOTICE

When installing the brake caliper into position, carefully fit the brake disc between the pads to avoid scratching them.

Troubleshooting