

Fuel Mileage Meter (Except MX, BR type)


Indicates the fuel mileage in every approximately 15 seconds.

The unit for types other than E and G is "km/l". For E type, it is "km/l" or "mile/l". For G type, it is "l/100 km".

When the motorcycle speed is under 10 km/h, "-" is indicated.

By pressing and holding the right control button (2), the indication /no indication can be altered.

The indicated fuel mileage may differ from the actual fuel mileage.

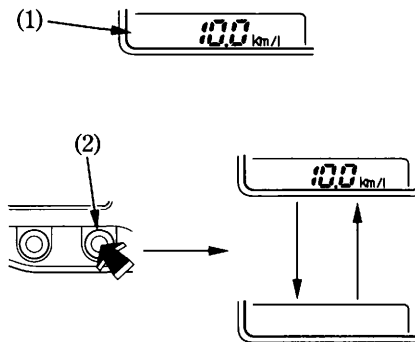

- (1) Fuel mileage meter
- (2) Right control button