


## Piston/Piston Rings/Piston Pin

---

18. Remove the dowel pins (17), cylinder head gasket (18) and cam chain guide (19).

**NOTICE**

*Do not let the dowel pins and cam chain fall into the crankcase.*

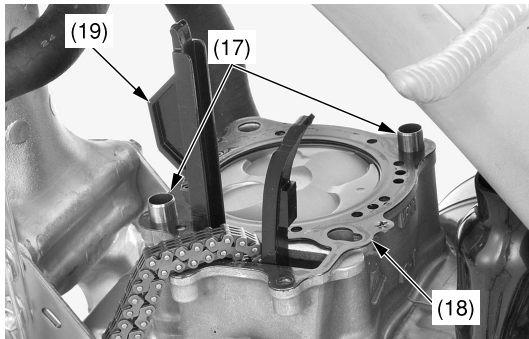

(17) dowel pins  
(18) cylinder head gasket  
(19) cam chain guide