



5. Install the clutch pressure plate (7).
6. Install the five clutch springs and clutch spring bolts (8).
7. Tighten the bolts in a crisscross pattern in two or three steps to the specified torque:
9 lbf·ft (12 N·m, 1.2 kgf·m)

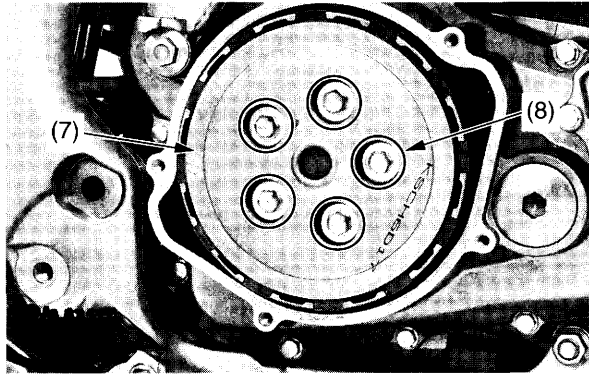

(7) clutch pressure plate
(8) clutch spring bolts/clutch springs

8. Install a new O-ring (9) in the groove of the clutch cover (10).
9. Install the clutch cover by tightening the clutch cover bolts to the specified torque:
7 lbf·ft (10 N·m, 1.0 kgf·m)

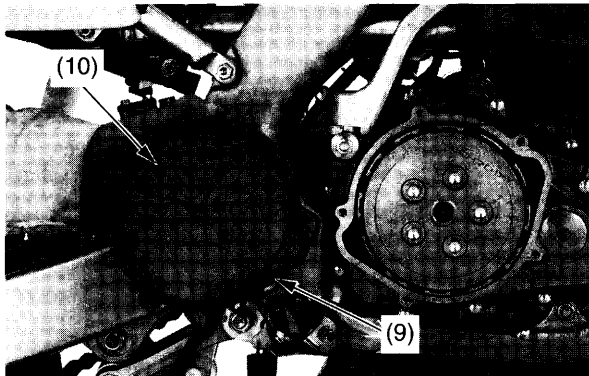


(9) O-ring (10) clutch cover

10. Apply grease to the rear brake pedal pivot bolt sliding surface.
11. Install the rear brake pedal (12), dust seals (11), washer (15) and pivot bolt (13) and tighten the pivot bolt to the specified torque:
27 lbf·ft (36 N·m, 3.7 kgf·m)

Connect the brake pedal return spring (14) if it was removed.

12. Insert the pin (16).

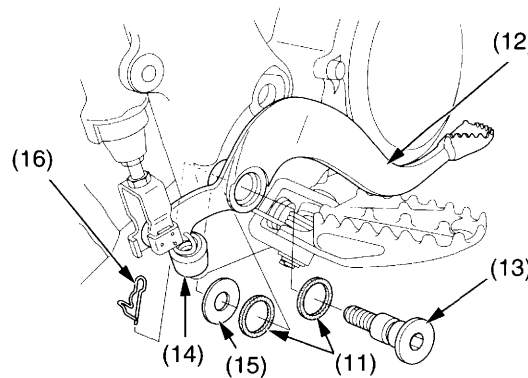

(11) dust seals (14) return spring
(12) rear brake pedal (15) washer
(13) pivot bolt (16) pin

13. Fill the crankcase with transmission oil (page 47).