

9. Spark plug and high tension terminal – check for looseness.
10. Engine stop switch—check for proper function (page 37 ).
11. Nuts, bolts, fasteners – check the front and rear wheels to see that the axle nuts are tightened securely. Check security of all other nuts, bolts, and fasteners.