

Closing the Fuel Fill Cap

- ① After refueling, align the fuel fill cap latch with the slot in the filler neck.
- ② Push the fuel fill cap into the filler neck until it snaps closed and locks.
- ③ Remove the key.
 - ▶ The key cannot be removed if the cap is not locked.
- ④ Close the shelter lid.

Do not fill with fuel above the plate.

WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.