


Centre Lower Cowl

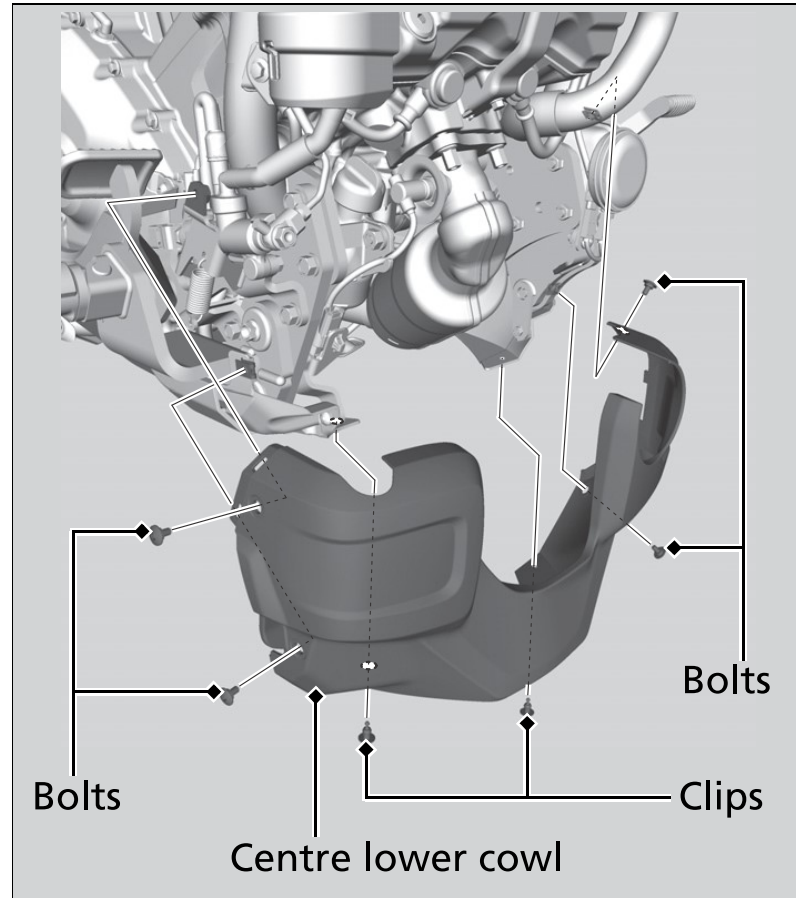

The centre lower cowl must be removed to service the coolant reserve tank.

Removal

1. Remove the right under cowl lid. ► P. 65
2. Remove the bolts and clips. ► P. 68
3. Remove the centre lower cowl.

Installation

Install the parts in the reverse order of removal.