


Clip

The clip must be removed to remove the right under cowl lid and centre lower cowl.

Removal

1. Loosen the pin by a Phillips screwdriver.
2. Pull the clip out of the hole.

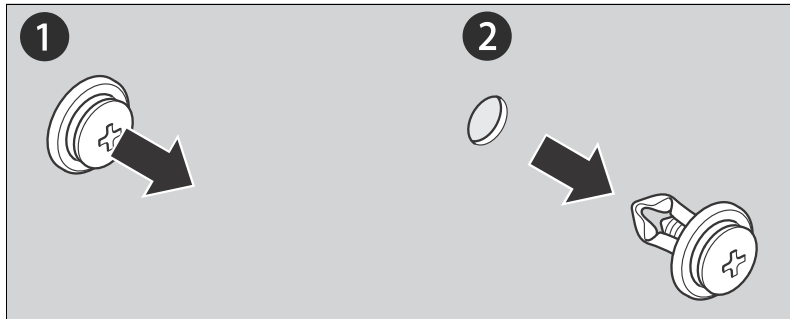

Installation

1. Insert the clip into the hole.
2. Push the pin in.

