


Check that the fluid level is above the LOWER level mark (1) with the scooter in an upright position. If the fluid level is near the lower level line, it indicates fluid leakage. See your authorized Honda dealer.

Other Checks:

Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.

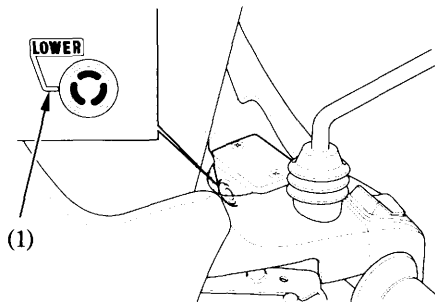

(1) LOWER level mark