

IDLE SPEED

(Refer to the maintenance precautions on page 66).

The engine must be at normal operating temperature for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.

NOTE:

- * Do not attempt to compensate for faults in other systems by adjusting idle speed. See your Honda dealer for regularly scheduled carburetor adjustments.

1. Warm up the engine, place the scooter on its center stand.
2. Connect a tachometer to the engine.
3. Adjust idle speed with the throttle stop screw (1).


Idle Speed:

1,500 ± 100 min⁻¹(rpm) ...except SW

1,500 ± 50 min⁻¹(rpm) ... SW

▲WARNING

- * The rear wheel will spin if not restrained by the brake or by contact with the ground. Accidental contact with a spinning rear wheel could cause personal injury.

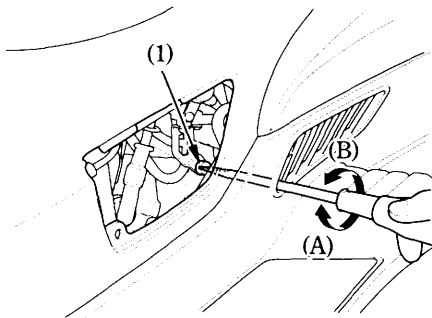

(1) Throttle stop screw

(A) Increase
(B) Decrease