


## Coolant Temperature Gauge

The coolant temperature gauge (1) shows coolant temperature.

When the segment C (2) goes on, the engine is warm enough for the scooter to be ridden. The normal operating temperature range is within the section between the segment C and segment H (3).

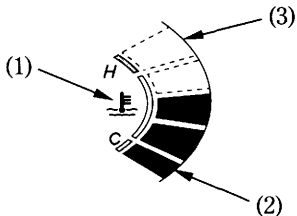


- (1) Coolant temperature gauge
- (2) Segment C
- (3) Segment H

## Overheating Message:

When the coolant is over specified temperature, the segment H and high coolant temperature indicator (4) goes on. If this occurs, stop the engine and check the reserve tank coolant level. Read pages 33 – 34 and to not ride the scooter until the problem has been corrected.

### NOTICE

Exceeding maximum running temperature may cause serious engine damage.

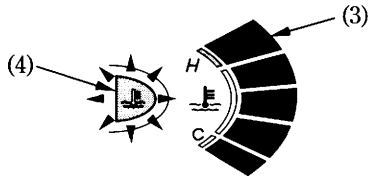

- (3) Segment H
- (4) High coolant temperature indicator