

LEFT COMPARTMENT

There is left compartment (1) below the left side of the handlebar.

The maximum allowable load in the left compartment shall be no more than 1.0 kg (2.0 lbs).

Do not open the left compartment while riding the scooter.

To Open:

- Insert the ignition key (2) and turn it clockwise.
Push and hold the knob (3), then open the left compartment cover (4).


To Close:

1. Close the left compartment cover and turn the ignition key counterclockwise.
2. Remove the key.

Make sure the left compartment cover is closed before riding.

When washing your scooter be careful not to flood this area with water.

Do not store valuables or fragile articles in the left compartment.

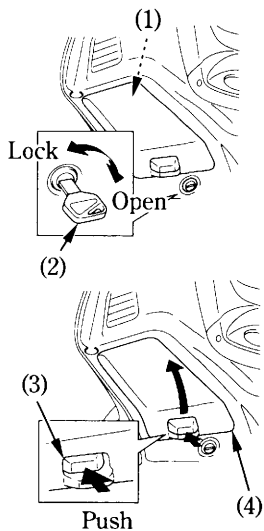

- (1) Left compartment
- (2) Ignition key
- (3) Knob
- (4) Left compartment cover