


FEATURES (Not required for operation)

HEADLIGHT BEAM ADJUSTMENT

The headlight beam can be raised or lowered by turning the vertical beam adjusting knob. Obey local laws and regulations concerning headlight adjustment.

⚠ WARNING

- ***Do not adjust the headlight beam while riding the motorcycle. Operating the motorcycle with one or both hands away from the handlebar/controls may result in a loss of vehicle control.***

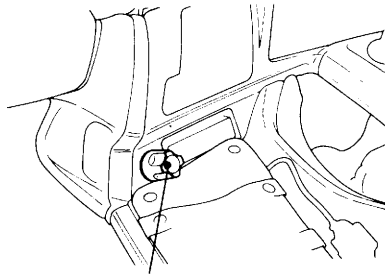

Adjusting Knob


VENTILATION LOUVERS

This motorcycle has upper and lower ventilation louvers. Open the upper louvers to direct fresh air. Open the lower louvers and adjust the levers to direct fresh or warmed air. For additional lower air flow, optional louvers can be mounted at the engine guards.

⚠ WARNING

- ***Do not adjust the ventilation louvers while riding the motorcycle. Operating the motorcycle with one or both hands away from the handlebar/controls may result in a loss of vehicle control.***

UPPER

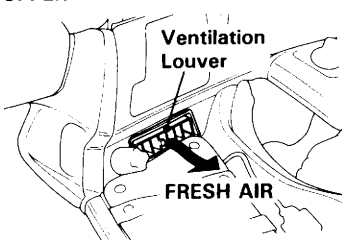

LOWER

