

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING (NOTE 1)								Refer to page	
			→	x1,000km	1	6	12	18	24	30		36
				x1,000mi	0.6	4	8	12	16	20		24
	NOTE	MONTHS		6	12	18	24	30	36			
FINAL DRIVE OIL									R	85		
BATTERY										96-97		
BRAKE FLUID	NOTE 4					R			R	21-22		
BRAKE PAD WEAR										95		
BRAKE SYSTEM										21-22, 95		
* BRAKE LIGHT SWITCH										_____		
* HEADLIGHT AIM										48		
CLUTCH SYSTEM										_____		
CLUTCH FLUID	NOTE 4					R			R	23		
* REVERSE OPERATION										_____		
SIDE STAND										87		
* SUSPENSION										_____		
* CRUISE VALVE ELEMENT									R	_____		
* AIR PUMP ELEMENT							C			_____		
* AIR DRIER										_____		
* NUTS, BOLTS, FASTENERS										_____		
** WHEELS/TIRES										_____		
** STEERING HEAD BEARINGS										_____		

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTES: 1. At higher odometer readings, repeat at the frequency interval established here.

2. Service more frequently when riding in unusually wet or dusty areas.

3. Service more frequently when riding in rain, or at full throttle.

4. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.

5. Switzerland type only.