

Search Lever

You can find the station you wish by the search lever. When the lever is pushed up, the frequency moves up, and when the lever is pushed down, it moves down.

If the lever is depressed once, the AM frequency display moves in 9 kHz steps and the FM frequency in 50 kHz.

In auto search, release the lever after the frequency display moves, and the next station is automatically tuned in. Repeat the above steps until the desired station is tuned in.

When the frequency display comes to either end, transition to the other end of the band takes place and continues in the same direction.

Muting Switch

Switching the Mute switch ON instantly lowers the radio's volume so you may hear surrounding sound more clearly. The display will indicate "MUTE." Switching Mute OFF restores the original volume. The muting functions for the radio and cassette deck.

⚠ WARNING

- ***While riding, never:***
 - ***Adjust the volume control.***
 - ***Switch between radio and cassette***
 - ***Install or remove cassette tape***
- ***Keep both hands on the handlebars while riding.***
- ***Do not turn up the volume so loud that emergency vehicles or traffic cannot be heard.***

