

FEATURES (Not required for operation)


Power Switch/Volume Control Knob:

Turn this knob clockwise to apply power to the radio. The display will indicate "AM" or "FM". Push the radio/cassette button to hear the cassette tape. The display will change to "▶" or "◀" when the deck is loaded with a tape. Turning the knob further increases the volume.

Tape Program Direction Selector (PRO):

This switch can be used to change the direction of the tape. The indicator in the display will be changed as shown below. This switch can be also used to stop the fast-forward or rewind.

Power Switch/Volume Control knob

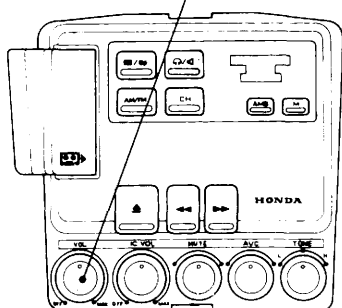

Tape Program Direction Selector

