

-
5. Check that the sealing washer on the drain plug is in good condition. Install the drain plug and tighten it to the specified torque:
40 N·m (4.0 kg-m, 29 ft-lb)
Replace the sealing washer every other time the oil is changed, or each time if necessary.
 6. Fill the crankcase with approximately 3.7 liters (3.3 lpm qt, 3.9 US qt) of the recommended oil (page 30).
 7. Install the oil filler cap.
 8. Start the engine and let it idle for a few minutes.
 9. Stop the engine. Make sure the oil level is at the upper level mark on the dipstick (page 29) and there are no oil leaks.

NOTE:

- When running in very dusty conditions, oil changes should be performed more frequently than specified in the maintenance schedule.